

Physical Features

20-key Keypad



800.648.4452
www.amltd.com
08052025



Multi-Tap Keypad



Scan Engine Window

Getting Started

1 Charge the PDX10 for 4 hours

Use the supplied USB cable and power adapter to charge from a 110VAC wall outlet. Phone chargers may or may not work properly with the PDX10 due to possible differences in charging currents. In addition, USB ports on desktop computers/laptops are also inadequate for charging and should not be used.

**Connect the
USB cable
here**



Getting Started

2 Starting up the PDX10 Power and Reset Procedures

Power Button



- Press and hold the power button to turn the PDX10 on.
- Pressing the power button briefly, while the unit is on, will either put the PDX10 into suspend mode, or wake it up depending on its current state.
- Pressing and holding the power button for a few seconds will display two prompts on the screen, to either "power down" or "reset" the device.


Getting Started

3 Download DC Console



Utilize **DC Console** to quickly modify existing applications or create new ones and transfer files from your PDX10 to your PC.

Download the DC Console utility at
www.amltd.com/Software/DC-Software

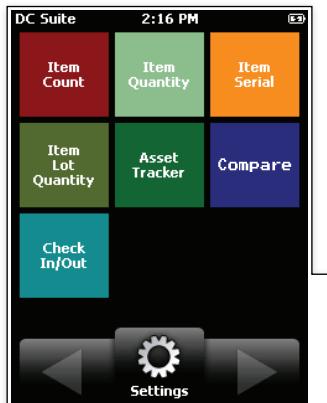

The PDX10 comes with a suite of pre-installed applications as a part of our **DC Suite**. These applications were developed for common data collection tasks and are ready to go right out of the box.

Dashboard

All applications are launched from here.

Simple one-field scanning.

Scan the Item Number and key in the Quantity.

Scan in Item Number and the unique Serial Number.

Scan the Item Number and then collect Lot Number and Quantity information.

Asset Tracking application.

Check-In/Out application for tool or part rooms.

Accessories



The PDX10 comes with a 110V power supply and a USB-C cable.

Replacements can be ordered if needed.

Power Supply:
Cable:

PWR-5V2A-USB
USBC-USBA-2M

Support

Learn More About the PDX10 at: www.amltd.com/pdx10

For **DC Suite** downloads and support visit:
www.amltd.com/Software/DC-Software

Warranty Agreements

- SVC-EWPPDX10-1** Extended Warranty, 1 year, PDX10
- SVC-EWPPDX10-2** Extended Warranty, 2 years, PDX10
- SVC-EWPPDX10-3** Extended Warranty, 3 years, PDX10

Get Updates from AML

Don't forget to register your product(s) online at www.amltd.com/register to receive updates about AML products and software.

© 2025 AML. All rights reserved.

AML reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult AML to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of AML.

AML shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of AML.



TESTED TO COMPLY
WITH FCC STANDARDS



7361 Airport Freeway
Richland Hills, TX 76118
800.648.4452
www.amltd.com