
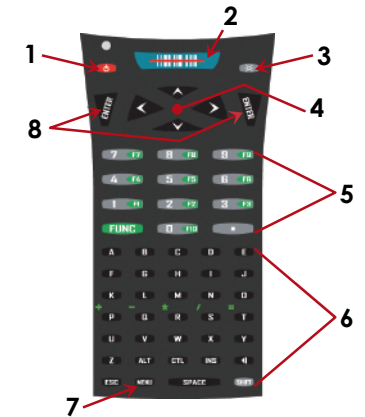
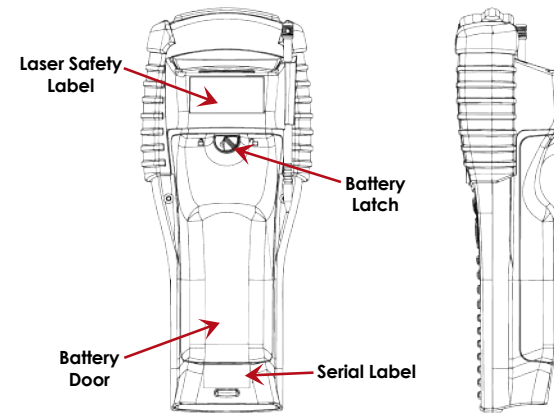


**Front and Bottom Views**

**Back and Top Views**

**Alphanumeric Keypad**

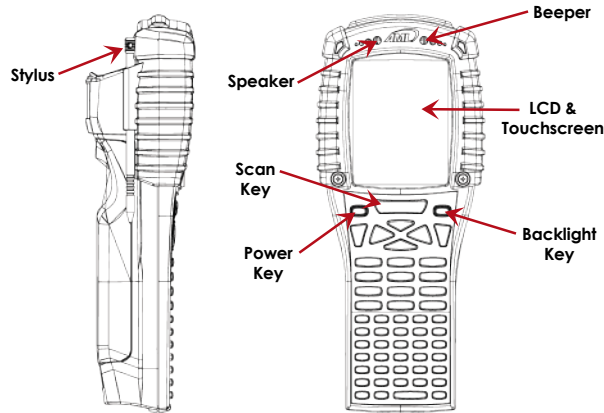

- 1. Power ON/OFF Key
- 2. Scan Key
- 3. Backlight Key
- 4. Arrow Keys
- 5. Numeric Keys
- 6. Alpha Keys
- 7. Menu Key
- 8. Enter Keys

800.648.4452  
www.amltd.com  
MADE IN USA  
09202016-1



**Getting Started**

**Getting Started**

**Getting Started**

**Getting Started**

**1 Load the main battery**

**2 Charge the M7225 for at least 4 hours**


**3 Using the Touchscreen**

**4 Learn More about the AML M7225**


1. Turn the access latch counter-clockwise




2. Remove the battery door by hinging it upward

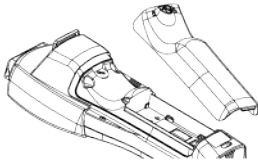

3. Insert battery in rear and slide towards the front to engage

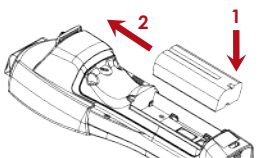


4. Turn the access latch clockwise

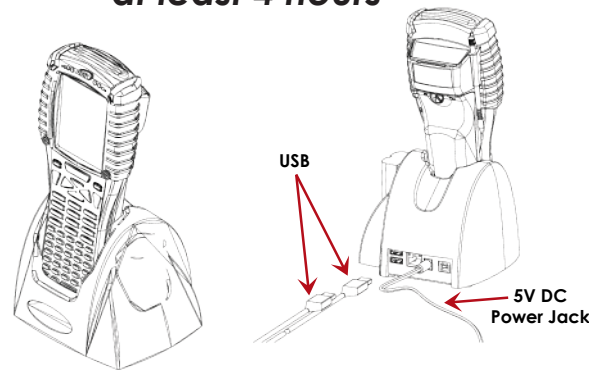


**Battery Charge Times**

Main Battery	Backup Battery
Before Initial Use = <b>4 hours</b>	Before Initial Use = <b>1 hour</b>
For Full Charge = <b>5 hours</b>	For Full Charge = <b>2 hours</b>

The M7225 uses a resistive-type touchscreen that can be used with gloved fingers or a plastic tipped stylus.

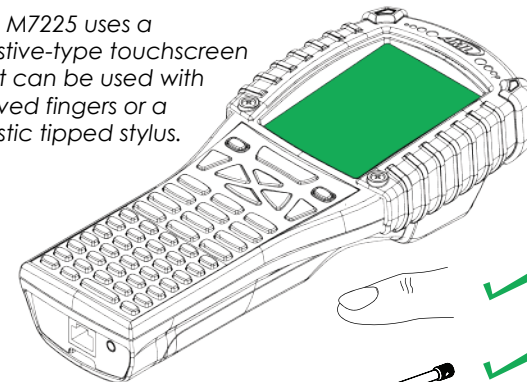

**NEVER USE METAL OR SHARP OBJECTS ON THE TOUCHSCREEN!**

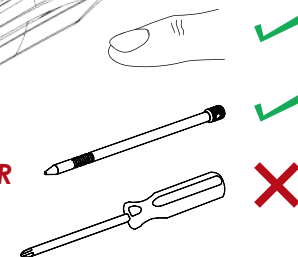

Learn more about the M7225 at:  
[www.amltd.com/m7225](http://www.amltd.com/m7225)

or  
Give us a call at  
**800.648.4452**



**Get Updates from AML**  
Don't forget to register your product(s) online at [www.amltd.com/register](http://www.amltd.com/register) to receive updates about AML products and software.



The M7225 comes with a suite of pre-installed applications as a part of our **DC Suite**. These applications were developed for common data collection tasks and are ready to go right out of the box.



As future applications are developed, they will be made available on the web at [barcodepower.com](http://barcodepower.com).

**Dashboard**  
All applications are launched from here.

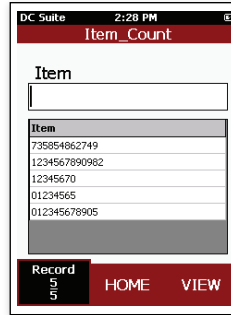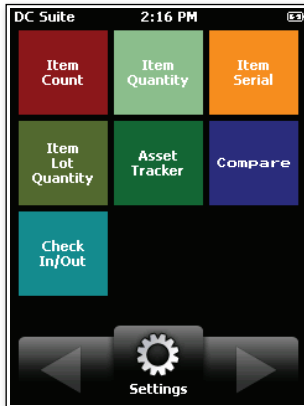



Simple one-field scanning.

Scan the Item Number and key in the Quantity.

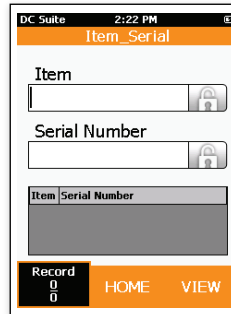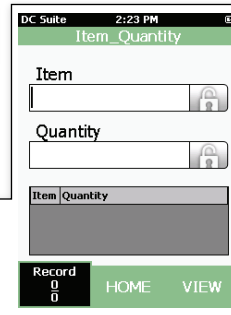


Scan in Item Number and the unique Serial Number.


Scan the Item Number and then collect Lot Number and Quantity information.

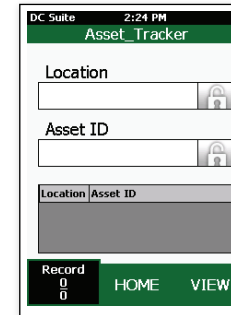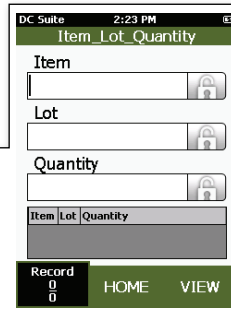

Asset Tracking application.

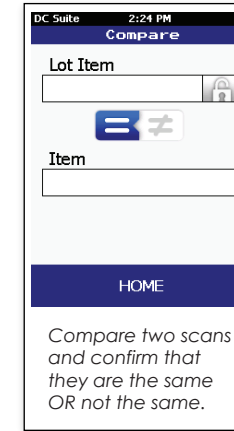

Compare two scans and confirm that they are the same OR not the same.

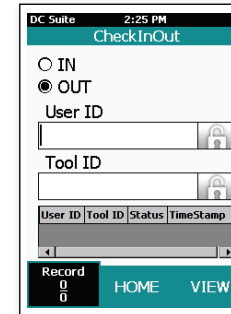

Check-In/Out application for tool or part rooms.

## Download DC Console

Download the DC Console utility at [www.barcodepower.com](http://www.barcodepower.com)



Utilize **DC Console** to quickly modify existing applications or create new ones and transfer files from your M7225 to your PC.

### ▲ IMPORTANT!

Users must install either Microsoft® ActiveSync® or Windows® Mobile Device Center® before installing AML **DC Console**.

*Note:* Microsoft ActiveSync works only with Windows® XP or earlier.


*Note:* The Windows Mobile Device Center is only supported on Windows Vista™ or later.

## Installing a microSD Card


## Using the Integrated Barcode Scanners

## Accessories


1. Remove the battery cover and main battery.

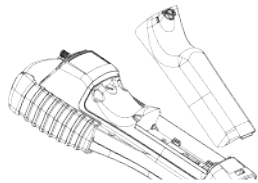


2. Locate the microSD card slot. To open the socket, slide the metal tab to the right and hinge upward.

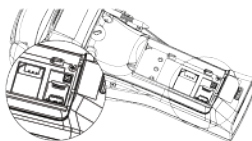

3. Insert the microSD card fully into the slot. Hinge the tab downward and slide into the locked position.

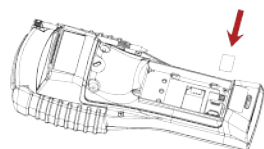


4. Turn the access latch clockwise  
**THE UNIT MUST BE COLD BOOTED AFTER INSERTING SD CARD!**

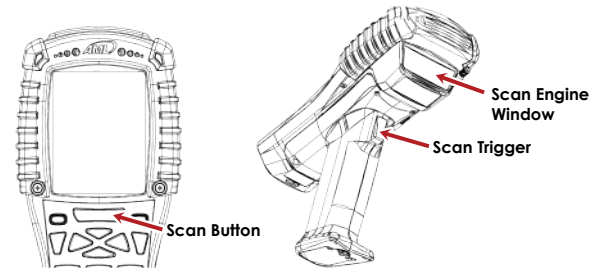

**Laser** - The laser scan engines require proper alignment of the bar code under the scanner window.




**2D Imager** - Capable of scanning bar codes at any orientation as long as the entire symbol is visible to the scanner and illuminated.

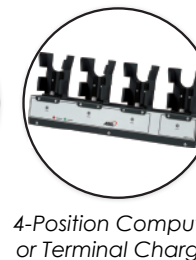

© 2016 American Microsystems, Ltd. All rights reserved.

 American Microsystems, Ltd. reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult American Microsystems, Ltd. to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of American Microsystems, Ltd. American Microsystems, Ltd. shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of American Microsystems, Ltd.



## Warranty Agreements

**SVC-EW7225** Extended Warranty, 3 year, M7225

**SVC-EWP7225** Extended Warranty PLUS, 3 year, M7225

