

Glink Terminal Emulation Quick-Start

To Begin:

Swipe UP on Striker's display to view the available applications.



Find the Glink app icon and tap it to activate.




CONNECTING TO YOUR HOST SERVER:


1. Choose applicable *Session* profile—VT220 or SSH—then tap the *Settings* icon :




2. Tap *Settings* > *Telnet options*:

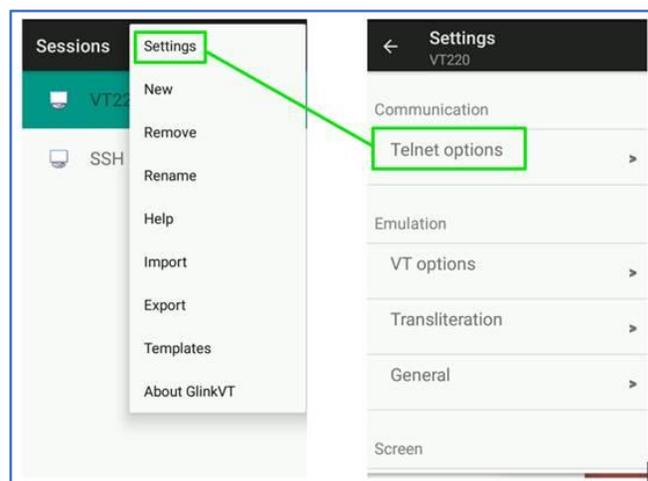

3. Enter the applicable Host Server IP address and tap OK:

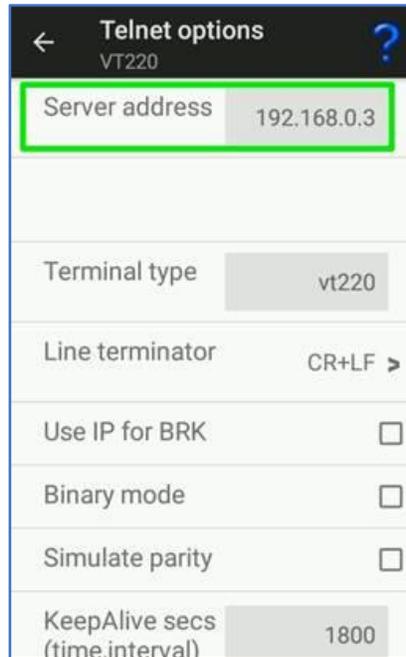


4. Press the *Back key*  returning to Main Menu, then tap *CONNECT*:

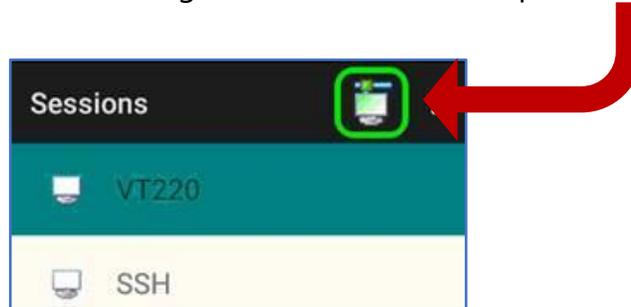

COMMON SETTINGS/ADJUSTMENTS:


CHANGING FONT SIZE

1. Tap *Settings* > *Screen options* > *Font size*

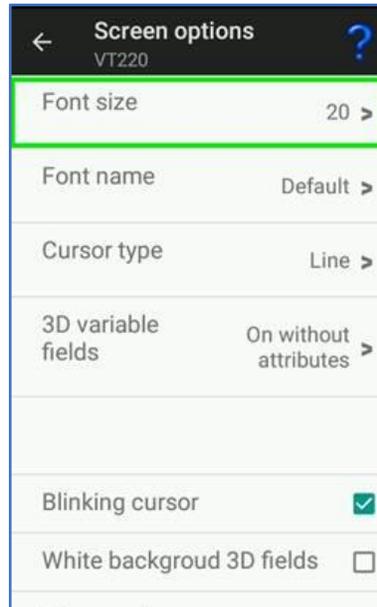


ENABLING AUTO-LOGIN

1. Tap *Settings* > *Telnet options* > configure the *Telnet login* section as follows:

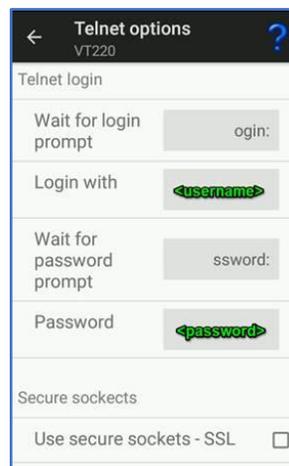

HELP SECTION

Each submenu includes a comprehensive help section accessed by tapping the help access icon:

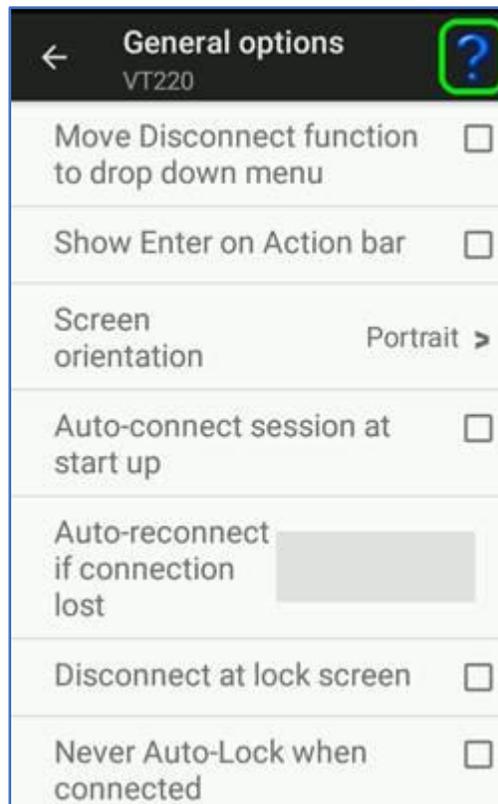

For more comprehensive documentation, go to:

<https://www.amltd.com/Product-Documentation>.

Look for the Striker product icon, and scroll the document selections to find the document entitled "Glink TE Software".