

Regulatory Information

All AML devices are designed to be compliant with rules and regulations in locations they are sold and will be labeled as required. Any changes or modifications to AML equipment, not expressly approved by AML, could void the user's authority to operate the equipment.

Power Supply

Use only an AML approved power supply, output rated 12 VDC and minimum 2.5A. The PWR-8050 Power Supply is certified to EN60950.

Disclaimer

AML reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult AML to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of AML.

AML shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright.

All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of AML.

No user serviceable parts. Do not use if unit is damaged.



FCC Declaration of Conformity
Product Name: Inline Charger
Model Number: ACC-7715-PS

Radio Frequency Interference Requirements

This equipment complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This equipment may not cause harmful interference, and (2) this equipment must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you determine the equipment does cause harmful interference to radio or television reception (this may be determined by monitoring the interference while turning the equipment off and on), you are encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.

Radio Frequency Interference Requirements - Canada

This Class A digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Marking and European Economic Area (EEA)



Products intended for sale within the European Union are marked with the CE mark which indicates compliance to applicable Directives and European Normes (EN), as follows. Amendments to these Directives or EN's are included.

- Electromagnetic Compatibility Directive 89/336/EEC
- Low Voltage Directive 73/23/EEC



Inline Charger



User's Guide

Introduction

The ACC-7715-PS Inline Charger charges any M7700 Striker, M7800 Scepter, or M7800 Solo Mobile Computer.

About This Guide

This guide provides instructions on setting up and using the ACC-7715-PS Inline Charger.

Set Up

Setting up the charger includes unpacking, connecting the power supply, and attaching the charger to your device.

Unpacking the Charger

The shipping box includes the following:

- One ACC-7715-PS Inline Charger
- One PWR-8050US Power Supply (12 VDC, 2.5 A)
- This User's Guide

Connecting the Power (Required)

The PWR-8050 power supply, included with the charger, is intended to be connected to a 120VAC outlet. This external power supply is required in order to power the inline charger and allow for its proper operation.

To connect power to the charger:

1. Plug in the PWR-8050 power supply to a standard 120 VAC electrical outlet.
2. Connect the plug on the end of the power supply into the round, barrel-jack connector on the rear of the charger. Do NOT use the USB port for charging.
3. The charger's power LED, on the rear panel, will illuminate dim green to indicate power is connected.

Charging

Attach the Inline Charger to the bottom of the M7700 Striker, M7800 Scepter, or M7800 Solo Mobile Computer and it will begin charging immediately.


Indicator Lights

| CHARGER STATE | LED INDICATOR |
|---|--------------------------|
| Device disconnected with power | GREEN (dim) |
| Charging in progress (including recharge) | YELLOW |
| Charging complete | GREEN (bright) |
| Charge faults: 1. Battery temperature too cold/hot 2. Battery over voltage 3. Charger too HOT 4. Safety timer expiration before battery completely charged 5. Internal charger fault 6. Battery not installed in device | Flashing YELLOW/GREEN |
| No Power | OFF |

How to Attach the Inline Charger


The Inline Charger should clip onto the rear of the device as shown.

Make sure the AML logo on the rear of the charger is not upside down and that its external power supply is connected.

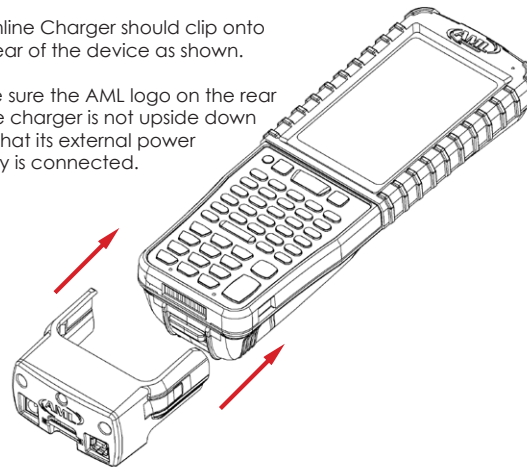

Communication Ports

The ACC-7715 Inline Charger has one communication port and one power jack located on the rear of the charger. The charger itself has no internal or external settings that can be changed.

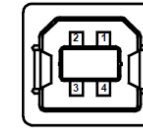

USB Type B
Connect to a PC
(transfer files, software development)

