

Enterprise Mobile Computer Quick Reference Guide





7361 Airport Fwy Richland Hills, TX 76118 800.648.4452 www.amltd.com 08022024



No Handle Version






No Handle Version



Pistol Grip Handle Version




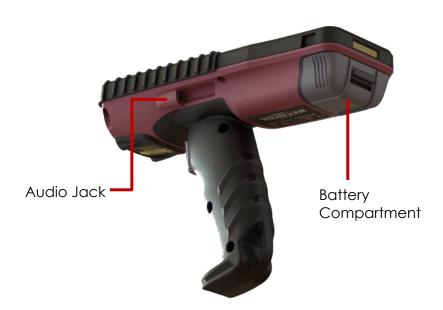

Pistol Grip Handle Version



 Load the main battery





3. Remove/replace battery



2. Pull battery door in the direction shown



 Replace battery door and slide tab to locked position



2 Charging your Striker



12V DC, 2.5A Power Supply

AML Part#: PWR-8050, supplied with ACC-7725

 
3 Setting Up Wi-Fi Connection



4 Turning Off the Striker



2. Use the bar which appears on the Striker's screen to power off



Note: pressing the red power button without holding will activate Sleep Mode only.

5 Access Documentation

- Click on Support in the Main Menu Visit the website: www.amltd.com
 - Click on Product Documentation Documentation below found under Striker
- Wi-Fi Setup
- Barcode App
- · Clone Utility for USB and PC
- Firmware Updates

Accessories





ACC-7735 4-Position Charger





Register your product.

In order to help facilitate support inquiries please register your product.

You can register your product(s) online at

www.amltd.com/register



AML Technical Support Team

AML technical phone support is toll-free and pain-free. Speak with a US-based AML employee trained to answer your question and do everything possible to resolve any issues that might arise.

877-842-3990 Mon-Fri 8:00 to 5:00 CST

Repair Services

If your Striker mobile computer is in need of repairs, you may request an RMA number (Return Material Authorization) by calling **877-842-3990**, between 8:00 am and 5:00 pm, (CST) Monday-Friday.

You may also request an RMA number online at:

https://www.amltd.com/RMA-Request

<u>Power Management Tips</u>

Follow these simple rules to ensure that the Striker performs at maximum efficiency for the longest possible duration.

- (1) Know the difference between "sleep mode" and "power off". When the power button is pressed and released, the display will dim, and the Striker will go into low-power "sleep" mode. The device will continue to consume battery power, but at a drastically reduced rate. But if left overnight, the user will notice they have less battery capacity when they wake the device than it did when they shut it down. If the Striker is going to be left idle for any significant period of time, completely power down the device by holding the power button down for a few seconds. A prompt will appear on the display that says, "Power Off". Confirm a true power-down by tapping this prompt and the Striker will power off.
- (2) The Striker's Advanced Wi-Fi settings has a feature that always allows the user to enable the Wi-Fi radio to remain ON, even during sleep mode. Setting this feature to ALWAYS, will have an adverse effect on battery life as the radio will remain on and active at all times, which in turn causes the CPU to idle at a higher rate as well in order to not fully suspend and maintain the network connection.
- (3) When "hot-swapping" the main battery, ensure that a new battery is installed within 10 minutes. If it sits idle for a while before a new battery is installed, ensure the device is properly TURNED OFF. When the main battery is removed, the display will immediately go dark which

might lead the user to believe the device has turned off. In fact, it has gone into "low-power" mode and is now running off of the internal backup battery. The longer the device remains in this state, the more the backup battery is depleted. Once the backup battery is depleted, the Striker powers down. When a main battery is inserted into a Striker with a depleted backup battery, it will power the device so the user can return to work, but some of its power is used to recharge the backup battery. For the first several minutes it will re-charge the back-up battery at an accelerated rate to get it quickly charged in case it is needed again soon. The backup battery will typically be fully recharged within the first two hours. During this period when the backup battery is recharging, users may notice the main battery depleting more rapidly than normal, resulting in overall reduced battery life for that charge session. To avoid this, minimize the time the device is in low power mode without a main battery. Install a fresh main battery quickly when hotswapping batteries. If a device has been in low-power mode, without a main battery for 10 minutes or more, install a fresh battery then set the Striker in a cradle for a half-hour or longer so that the backup battery can re-charge without taxing the main battery.

Battery Care

Adequate battery life is crucial to the performance of mobile computing devices. Here are some tips for prolonging the life of your Striker batteries:

- Charging your batteries at room temperature is recommended. Charging at lower temperatures will require a longer charge time and charging below freezing can permanently damage battery cells, making them more sensitive to failure when exposed to vibration and other stresses. Charging at elevated temperatures (above 40°C / 104°F) is also not recommended as it can create a possible thermal runaway condition that can also permanently damage a battery cell.
- Avoid discharging the batteries completely. The shorter the discharge, the longer the battery lasts.
 There is no issue with "memory" and the battery does not need periodic full discharge cycles to prolong life.
- Avoid storing batteries with a full charge. If you purchase batteries to be used as replacements in the future, avoid the urge to fully charge them and then set them on the shelf. Instead, place them in a cool, dry place and then wait to charge them fully when you're ready to use them. Ideally, Li-ion batteries should be charged at 40 percent for long-term storage. The worst possible scenario is a fully-charged battery stored at an elevated temperature.
- Date-stamp your batteries when you receive them. If you use the "500-cycle rule" meaning that your battery should last about 500 charges you can calculate about how long your batteries are expected to work at 80 to 100% of full capacity. It's important to note that Lithium Ion batteries do just simply age, regardless of charge cycles. If a battery is five years old, even if it's only used once a month, it will still not perform at full capacity.

How long should the battery last?

AML periodically tests the battery life of our products using real-life scenarios to produce empirical data. The information below was gathered from tests performed on our Striker Mobile Computer in various configurations. Note that this information is in no way a warranty or guarantee of performance for all applications. It is simply to provide a point of reference for battery performance under a known set of criteria.

Test Criteria:

- Each Striker was loaded with an application that simulated a "trigger pull" or "scan press" every ten (10) seconds.
- On each "trigger event", the scan engine was activated to scan a barcode and the radio was activated to ping a server, while the LCD remained on at all times.

Model No.	Scan Engine	Battery Life	Trigger Events
M7712-1300	1D Linear Imager	13:44	4,742
M7712-1100	Standard Laser	13:02	4,499
M7712-1600	Standard Imager	12:41	4,381
M7712-1700	Near/Far Imager	12:19	4,256

Sanitizing your device.

The best way to clean and sanitize your AML mobile computer or kiosk is to use a diluted solution of three-parts water and one-part <u>rubbing alcohol</u>. Rubbing alcohol is a diluted form of isopropyl alcohol. It typically contains 70% isopropyl alcohol with the balance consisting of other denaturants. Do not use full-strength isopropyl alcohol.

Apply the solution to a soft cloth first, and then wipe all surfaces of the device.









Do I have the coverage I need? UPGRADE YOUR WARRANTY TODAY!

Extended Warranty & Extended Warranty PLUS include:

- Covers the failure of internal components as a result of normal wear and tear.
- · Covers firmware upgrades.
- Four (4) business-day turnaround, excluding time in transit, when RMA number is properly marked on the outside of the box.

of external components regardless of fault.*

The Extended Warranty PLUS also includes coverage for failure

• Standard return freight (UPS ground) included.

*Some Exclusions Apply.

Contact AML for further details

www.amltd.com

800.648.4452

Laser Devices

Class 2 laser scanners use a low power, visible light diode. As with any very bright light source, such as the sun, the user should avoid staring directly into the light beam. Momentary exposure to a Class 2 laser is not known to be

The following statement is required to comply with US and international regulations.



CAUTION Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous laser light exposure.

Label Reads

COMPLIES WITH 21CFR1040.10 AND 1040.11 AVOID EXPOSURE. LASER RADIATION EMITTED FROM THIS APERTURE CAUTION

LASER RADIATION DO NOT STARE INTO BEAM! 630-680nm LASER

1.0 MILLIWATT MAXIMUM OUTPUT CLASS II LASER PRODUCT

LED Devices


For LED devices which have been evaluated to IEC 62471 and comply with the Exempt Risk Group, no product labeling requirements

Howerver, the following statement is required to comply with US and international regulations:

LED Compliance Statement

Classified as 'EXEMPT RISK GROUP' according to IEC 62471:2006 and EN 62471:2008.

NO USER SERVICEABLE PARTS

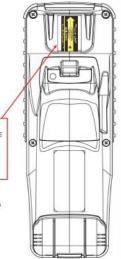



Safety NOM/NYCE-NOM-019-SCFI-1998 Safety of data processing equipment

AML reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult with AML to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of AML. AML shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the performance, or use of this material. This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of AML.



7361 Airport Fwy Richland Hills, TX 76118 800.648.4452 www.amltd.com



NOTES

 	 · · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	

NOTES

 	 · · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	