

M5900 Portable Batch Terminal Quick-Start Guide



Effective Date:
June 2011



Front View




Back View




Getting Started

1 Load the main battery


1. Turn the access latch counter-clockwise

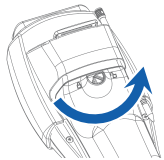


2. Remove the battery door by hinging it upward

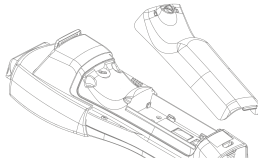

3. Insert battery in rear and slide towards the front to engage

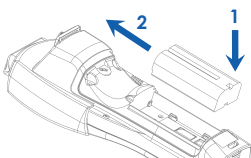


4. Turn the access latch towards the front to engage

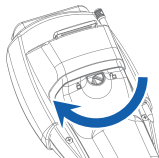

Getting Started

2 Charge the M5900 for at least 4 hours

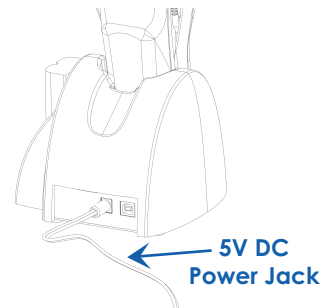

For charging with the ACC-5910 In-Line Charger, see the back

Battery Charge Times

	Before Initial Use	Full Charge Time
Main Battery	4 hours	6 hours

Getting Started

3 Learn More about the AML M5900


Download the M5900 Specification Sheet, User Manual, Firmware, and Utility Software online at

www.amltd.com/support.asp

or

Give us a call at
800.648.4452

M5900 Portable Batch Terminal 35-key Numeric Keypad

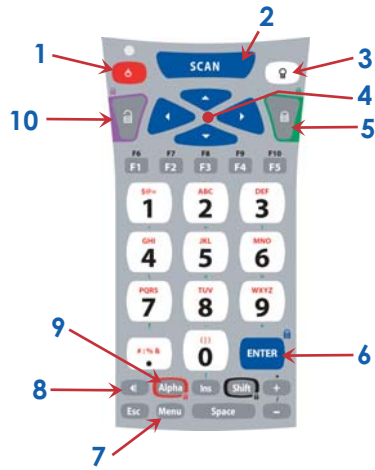


- | | |
|----------------------------|--------------------------------|
| 1. Power ON/OFF Key | 6. Enter Key |
| 2. Scan Key | 7. Menu Key |
| 3. Backlight Key | 8. Backspace Key |
| 4. Arrow Keys | 9. Alpha Modifier Key |
| 5. Lock/Green Modifier Key | 10. Unlock/Purple Modifier Key |

ACC-5910 In-Line Charger



A fully discharged battery takes about 4 hours to recharge

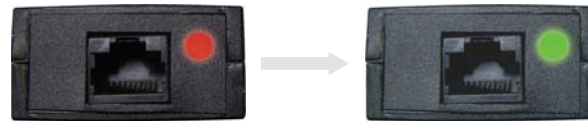

NOTE: The M5900 terminal will automatically turn on when connected to the in-line charger or placed in the charging cradle.

Built-In Programs

There are six (6) built-in programs that can be used on the M5900 terminal right out of the box. You can also create your own unique program(s) using either the On-Board Programmer or the M5900 Program Generator software. Please refer to the M5900 User's Guide to learn more about creating programs.



Built-In Programs

- P1 Captures Item Number
- P2 Captures Item Number, Quantity
- P3 Captures Item Number, Quantity, Location
- P4 Captures Item Number, Quantity, From Location, To Location
- P5 Captures Order Number, Item Number, Quantity
- P6 Captures P.O. Number, Item Number, Quantity

Turn Device ON/OFF & Suspend

In order to suspend the terminal, simply press the on/off button once. If you wish to store the unit for long periods of time while not in the charger, you can completely shut down the unit by pressing both the on/off button and the scan key simultaneously. Hold both keys for more than five (5) seconds while the unit powers off. The LED light will flash rapidly when the unit is powering down.



More M5900 Accessories



ACC-5925
Terminal Charger



4-Position Computer
or Terminal Charger



4-Position Battery
Charging Cradle

Warranty Agreements

- | | |
|-------------|--|
| SVC-EW5900 | M5900 Extended Warranty (3 Years) |
| SVC-EWP5900 | M5900 Extended Plus Warranty (3 Years)
<i>Extended Plus warranty includes "no fault" coverage for external components.</i> |
| SVC-EWX5900 | M5900 CARE Plan Extended Warranty (3 Years)
<i>The Care Plan is an Advanced Exchange Program. Requires purchase of spare devices.</i> |

© 2011 American Microsystems, Ltd. All rights reserved.

American Microsystems, Ltd. reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult American Microsystems, Ltd. to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of American Microsystems, Ltd. American Microsystems, Ltd. shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of American Microsystems, Ltd.



Safety NOM/NYCE-NOM-019-SCFI-1998
Safety of data processing equipment



2190 Regal Parkway
Euless, TX 76040
www.amltd.com
1-800-648-4452
email: sales@amltd.com