

QUICK START

Connect and charge


Use the cradle to charge a PDX50 and a spare battery.

Part No. ACC-5325

Dock the PDX50


1 Connect power

Connect the supplied power adapter to the cradle. Seat the L-shaped output connector fully in the cradle power input.

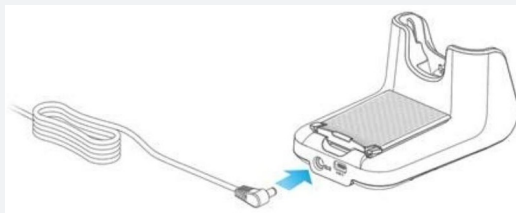

2 Insert the device

When the left power indicator is green, place the PDX50 in the cradle with its screen facing forward. A solid amber indicator confirms the device is connected.

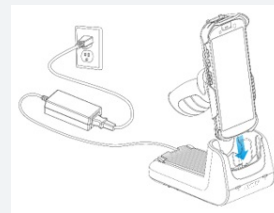

USB-C COMPUTER CONNECTION

Connect the cradle to a computer with a USB-C cable to communicate with the PDX50.


Charge a spare battery

Install spare battery in charger



Align the battery, then press down until seated.

Remove spare battery

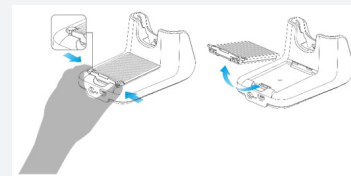

Press both latches and lift the battery out.

CHARGING CONDITIONS

For a full charge in about three hours, charge at room temperature (about 77°F / 25°C) in a well-ventilated area. Charging may take longer when the battery is hotter than 113°F / 45°C or colder than 50°F / 10°C.

REFERENCE

Read the cradle indicators

The cradle has separate indicators for the PDX50 connection and the spare battery bay.

PDX50 connection and power


Indicator	Light	Meaning
Terminal & power	Solid amber	PDX50 connected
Terminal & power	Solid green	No PDX50 connected
Terminal & power	Off	Cradle has no power

Spare battery status

Indicator	Light	Meaning
Battery	Solid amber	Charging; capacity below 95%
Battery	Solid green	Charging; capacity at or above 95%
Battery	Blinking red	Charging error
Battery	Off	No battery in the bay

Connect cradles in series

Slide the connection bracket into position, then align the joining boss on one cradle with the matching opening on the next. Each cradle needs its own power supply.

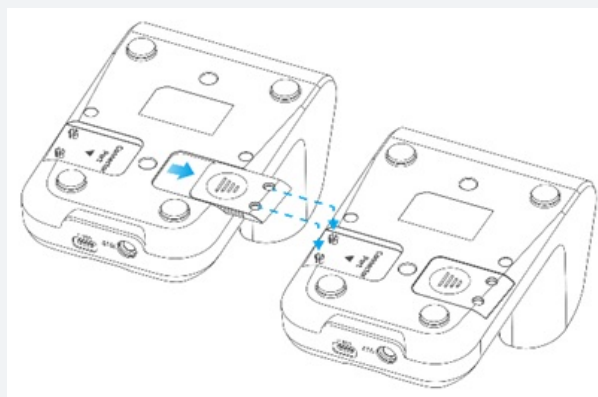

HELP AND SAFETY

Help and safety

Support information and important notices for the PDX50 Charging Cradle.

Help and support

TECHNICAL SUPPORT

877-842-3990

support@amltd.com

www.amltd.com

7361 Airport Fwy

Richland Hills, Texas 76118

Use safely

- Use only AML-approved PDX50 batteries (model 180-5300) and charging accessories.
- Do not charge when USB-C ports or cradle contacts are wet.
- Do not disassemble, puncture, or short-circuit the battery.

DISCLAIMER AND NOTICES

Disclaimer and notices

AML reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult with AML to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of AML. AML shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of AML.

LATEST INFORMATION

Specifications and procedures may change. Visit www.amltd.com or contact AML Technical Support at 877-842-3990 for current information.