

Installation Manual






2190 Regal Parkway Euless, Texas 76040 800.648.4452 www.amltd.com




AML ADJUSTABLE ANGLE VESA 75 BRACKET (ACC-0794)


REMOVE THE 2 BOTTOMS SCREWS, DO NOT DISCARD

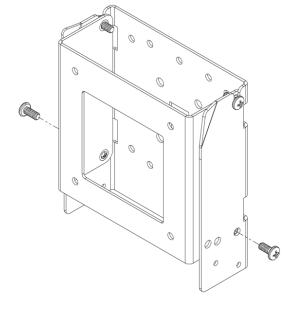


UNHOOK THE FRONT PANEL FROM REAR PANEL WITH AN UPWARD MOTION, AS SHOWN

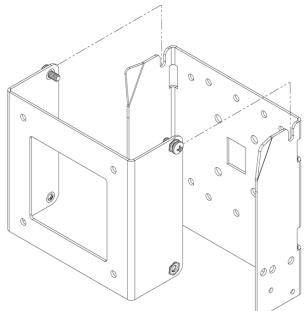

SECURE BRACKET FRONT PANEL TO DEVICE USING THE M4 SCREWS PROVIDED WITH THE DEVICE.

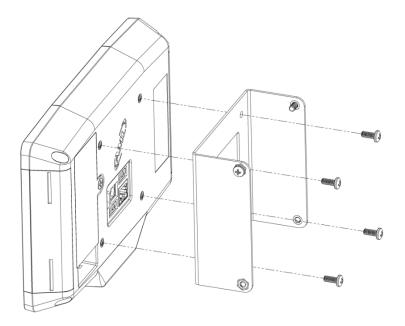



PLUG IN POWER OR OTHER ACCESSORIES AS NEEDED

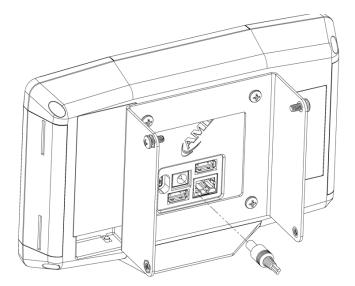


SECURE BRACKET REAR PANEL TO THE DESIRED MOUNT (EXAMPLE VESA 75 ARM MOUNT SHOWN HERE).

USE #8 OR M4 HARDWARE.

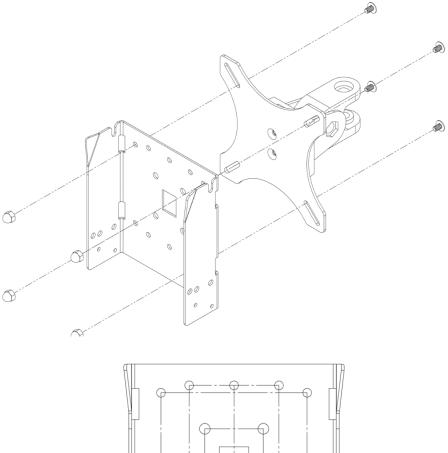

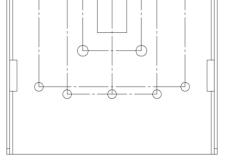


HOOK THE DEVICE AND FRONT BRACKET TO THE REAR BRACKET, AS SHOWN

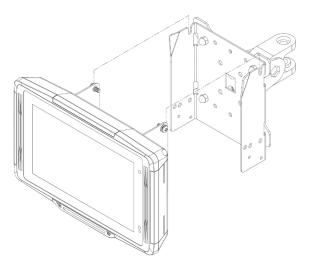

RE-INSTALL THE 2 BOTTOM BRACKET SCREWS.

3 POSITIONS AVAILABLE: 0 – 10 – 15 DEGREES

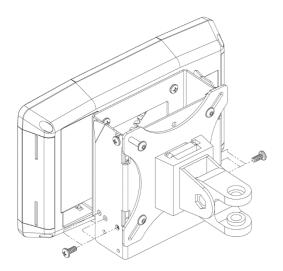

Support & Repair Services



AML Technical Support Team

AML technical phone support is toll-free and painfree. Speak with a US-based AML employee trained to answer your question and do everything possible to resolve any issues that might arise.

877-842-3990 Mon-Fri 8:00 to 5:00 CST

If your Firebird Kiosk is in need of repairs, you may request an RMA number (Return Material Authorization) by calling **877-842-3990**, between 8:00 am and 5:00 pm, (CST) Monday-Friday.

You may also request an RMA number online at:

https://www.amltd.com/RMA-Request